





- 1** Identify all tent components (see list below).

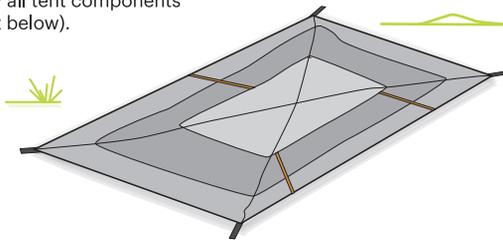


- 2** Spread out tent body and identify the front (2 zippers) and rear (1 zipper) of the tent.

- 3** Assemble all poles.

- 4** Orient peak hub assembly so that the wider angles are facing the front and rear of screenhouse.

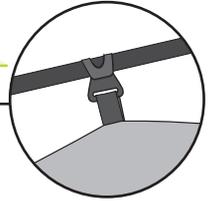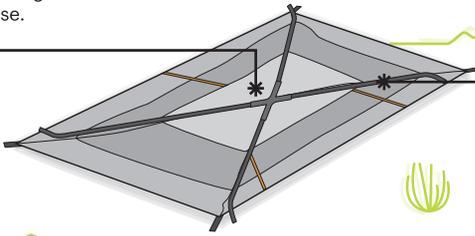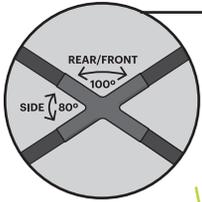


- 5** Attach roof clips to top poles.

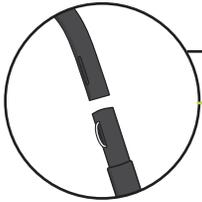


- 6** Insert tapered end of bottom poles into top poles. Ensure that locking clips have engaged.



- 7** Insert metal pin into end of each bottom pole.

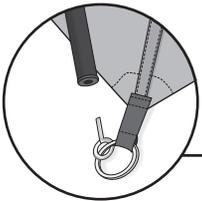

- 8** Attach all remaining clips to poles.

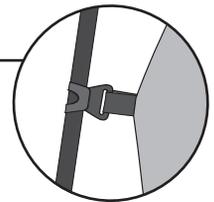

- 9** Stake 4 corners and 8 guylines as shown.

### TENT CONTENTS

Screenhouse body  
Peak hub + top pole assembly (1)  
Steel bottom poles (4)  
Plastic stakes (9)  
Steel stakes (8)  
Guy lines (8)

### QUESTIONS?

Johnson Outdoors Gear, Inc.  
USA: 1-800-572-8822  
www.eurekacamping.com  
Johnson Outdoors Canada  
Canada: 1-800-263-6390  
www.eurekatentscanada.com

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

### TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.