ASSEMBLY INSTRUCTIONS



4300614 SCREEN HOUSE 11' x 9'

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE SCREENHOUSE BEFORE USE TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOM-MENDED TWO ADULTS BE INVOLVED IN SET UP.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED. TO PROLONG THE LIFE OF THE SCREENHOUSE, SELECT A LEVEL, CLEAN AREA FOR SET UP.

- **STEP 1:** Spread screen house out flat with the black and grey pole sleeves facing up.
- **STEP 2:** Extend the three fiberglass frame poles by pulling out each section and placing pole ends into the metal ferrule connectors. You will have two black poles (A) and one grey pole (B).

- **STEP 3:** While leaving screen house on the ground, make certain the pole sleeves are in line with each other and slide each fiberglass pole through the corresponding colored sleeves (Black and Grey) that are opposite each other on the roof of the screen house.
 - ground,
- **STEP 4:** Straighten the pole sleeves along the fiberglass poles and position the poles so that they are laid out even across the top of the screen house.
- **STEP 5:** Locate the pole pockets that are attached to the screen house above the two doors. Place one end of the grey fiberglass pole into one pocket. Go to the other side of the screen house and flex the fiberglass pole and place the other end into the corresponding pole pocket.

STEP 6: Locate the plastic corner joints (D) that are attached to the screen house. Attach them to the ends of the black fiberglass poles. The smaller opening of the corner joints with "teeth" fit over the end ferrules on fiberglass poles.



STEP 7: Where the three poles cross at the center of roof there is a tie to that goes over the poles to hold them together.

STEP 8: Extend each of the four steel poles (C), by pulling out each wire-corded section and placing the jointed ends into the connected pole sections.

STEP 9: With an adult on each side at one end of the screen house, insert the end of the steel poles into the bottom opening of the plastic joint at the roof corner of the screen house.



STEP 10: Each adult should lift up on the steel poles and while raising the end portion of the screen house, place the bottom ends of the steel poles over the fast feet at the base of the screen house.


STEP 11: Using the two remaining steel poles, repeat the previous step at other side of the screen house.

STEP 12: Clip the screen house to the steel upright poles with the plastic clips sewn to the screen house walls.


STEP 13: Stake the screen house to the ground by inserting the stakes through the stake loops at each corner. Hammer stakes into the ground at a 45° angle, making sure the screen house is pulled out even and tight. Continue to stake down the screen house by staking down the

stake loops at all four corners of the door mats under each door.

NOTE: For the magnetic doors to open and close properly it is important to stake down the door mats.

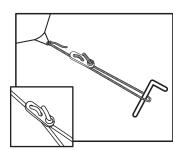

STEP 14: Guy ropes have been provided for added stability. Extend each of the guy ropes which are attached to the four corners of the screen house. Make a loop at the opposite end of the guy rope, by using slider as shown and place loop over plastic tent stake. Adjust slider to make guy rope tight and stake to the ground.

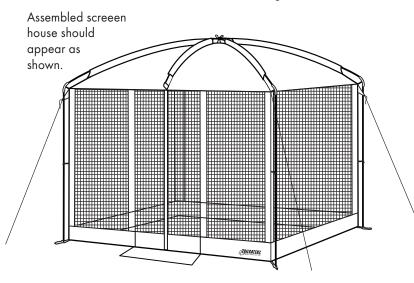

NOTE: To take down screen house, follow steps above in the reverse order. Place stakes into stake bag and poles into pole bag, which are provided. The screen house should be folded into equal parts toward the center of the screen house to distribute the bulk. Place frame on folded screen house and start a small tight roll, the width of your carry bag. Once rolled, tie a string or rope around screen house to hold it in place. Place screen house and stake bag into carry bag. Make sure screen house is clean and dry before storing.