 


OWNER'S MANUAL

Outdoor Screen House
13ft x 9ft x 84in/3.96m x 2.74m x 2.13m

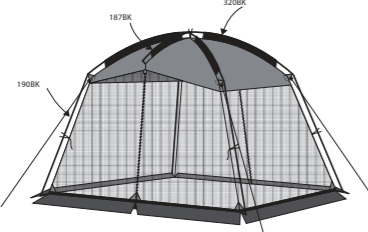

QTY.	DESCRIPTION	PART NUMBER
FABRIC BODY:		
1	Screen House	N/A
POLES:		
2	Fiberglass, shock-corded Roof Pole - black	320BK
1	Fiberglass, shock-corded Roof Middle Pole w/caps - black	187BK
4	Steel, Chain-corded Leg Pole - black	190BK
If you wish to order a complete set of poles, please use:		
1	Pole Set of Seven Steel and Fiberglass Poles- black	BK7
CARRY BAG:		
1	Carry Bag - navy	560NV
UNIVERSAL PARTS: (some attached to fabric)		
4	Elbow Connector 155 degree (attached to screen house corners)	153-6
1	Pole Bag	26IN
1	Stake Bag	11IN
4	Guy Ropes; 3.0M	3M
STAKES:		
1	Stake Set of Ten 7in. steel stakes	10S71N

Review your parts list above to make sure all parts listed above have been included in your package.

Please contact us before you return this product
Sales@alfagearproducts.com www.alfagearproducts.com

ASSEMBLY INSTRUCTIONS

THIS RECREATIONAL PRODUCT REQUIRES TWO PEOPLE TO ASSEMBLE.

- Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- Carefully fold out your poles, using caution to prevent snapping the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up. Sort POLES by type and length; refer to parts list descriptions.
- Do not drop tent bag or pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-cord and/or pole ends.

STEP 1: Verify Package Contents

Verify package contents by emptying contents of bag (s) and confirming all parts are included and undamaged.

Tip: Do this at home before you leave on your trip.

STEP 2: Lay Out the Screen House

A) Select a smooth level site and spread out your tent.

B) Extend Poles and sort into groups.

 
STEP 3: Assemble Screen House

A) Place the roof poles in position for installation.

B) Begin with the Roof Middle Pole (187BK) and slide it into its middle roof sleeves; finish securing by inserting both pole ends into the pole pockets above each door zipper. Take a Roof Pole (320BK) and slide it into its sleeves; then insert the end into the ribbed side of one Elbow Connector (153-6) at a roof corner. Gently flex pole into an arch and secure pole ends into its own ribbed side of elbow connectors at each corner. Repeat with the other pole. Caution: make sure all pole sleeves are evenly distributed along their poles; if pole joints catch on fabric, they can suffer undue stress and break pole or tear fabric.

C) Place one end of a steel leg pole (190BK) into the smooth end of Elbow Connector (153-6), then secure the other end of the leg pole onto the pin-rings at base of tent. Repeat with the remaining steel leg poles.


D) Secure poles with fabric ties as shown in illustration.

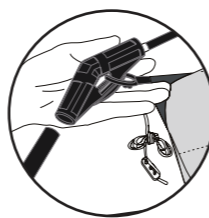


STEP 4: Stake Screen House

A) Stake screen house by driving stakes through the webbing loops and pin-rings on base of screen house.

 Tip: Stakes provided are for solid ground. Camping in sand? We suggest corkscrew style. Check favorite retailer for availability.

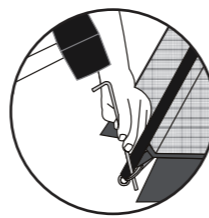

 B) To secure guy lines, find the guy line plastic slider and look for the knot. Pull this portion, forming a loop (works like a slip knot). Extend guy line to ground and stake. Repeat with remaining guy lines.

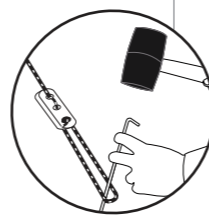

DISASSEMBLY INSTRUCTIONS

- Make sure all doors are zipped nearly closed, leaving space to allow air to escape when repacking.
- Store all Poles and Stakes in their corresponding Bags to prevent any possible tearing or damage to the fabric piece(s).

STEP 1: Remove the Stakes

Carefully remove stakes by pulling out the hook ends. Do not pull or tug at the stake loops sewn onto the webbing pocket. Remove excess soil from the stakes and store them in their bag.

STEP 2: Take Down Screen House

A) Release the fabric tie from one leg pole. Lift screen and pull pin-ring out from the leg pole. Repeat for each leg pole.

B) Pull one leg pole out from roof elbow.

Set down gently. Repeat for each leg pole.

C) Gently flex one roof pole to release from the elbow connector, then slide completely out from pole sleeve. Repeat for each pole.

D) Remove pole from pockets.

E) Collapse all poles and store them in the pole bag.

STEP 3: Fold the Tent

Fold fabric into a rectangular shape the same width as pole bag. Lay pole bag at one end of fabric and roll tightly together, slowly squeezing air out as you go. Store screen-house in carry bag provided. (Following these instructions will make it easier to fit tent into bag.)

INTRODUCTION

A MESSAGE TO OUR CUSTOMERS:

Thank you for purchasing a quality product by Roraima Outdoor Gear. As a new player in outdoor recreational products, we pride ourselves in delivering quality, customer friendly products. Please visit our authorized retailers for many quality products to suit your needs from us. As a valued customer, your satisfaction is very important to us. We welcome your feedback and await your responses, suggestions, and recommendations. Email us via sales@roraimaoutdoor.com or visit our website www.roraimaoutdoor.com.

WE ADVISE YOU TO ASSEMBLE THIS PRODUCT AT LEAST ONCE AT HOME BEFORE GOING ON A TRIP. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself setting up in the dark or adverse weather conditions.

GET THE MOST ENJOYMENT FROM YOUR PRODUCT BY READING THIS OWNER'S MANUAL THOROUGHLY; THEN FOLLOW OUR CAMPING SUGGESTIONS OUTLINED BELOW. NOTE THE SYMBOLS WE USE AND WHY:



CALLS YOUR ATTENTION TO ANY POSSIBLE HAZARDS IN THE USE AND HANDLING OF YOUR PRODUCT.



CALLS YOUR ATTENTION TO PROVEN SUGGESTIONS COLLECTED FROM OUR CAMPING EXPERTISE AND WILL ENHANCE YOUR EXPERIENCE!

IMPORTANT NOTICE: You may compromise the original FIRE RETARDENCY and WATER REPELLENCY protective coatings when you apply sprays or other chemical treatments to your tent.

This fabric has been factory-treated and is HIGHLY WATER-REPELLANT; however, it is NOT WATERPROOF. All tents can experience seam leakage during wet weather. If you desire additional moisture protection, use a seam sealing compound ONLY; be sure to follow the manufacturer's directions. We recommend sealing your tent during your initial setup and prior to each camping season. Seam Sealer Compounds can be purchased at your local camping products retailer. For more information, please refer to our website, www.roraimaoutdoor.com or contact our Service Representatives via email: sales@roraimaoutdoor.com.



DO NOT SPRAY!



THIS FABRIC IS NOT WATERPROOF!

Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellant in light rain conditions. Insure a successful and enjoyable camping experience by heeding the following tips:

- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound – refer to the seam sealing information in DO NOT SPRAY section of this owner manual.

Important: Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and IS NOT COVERED BY THE LIMITED WARRANTY.



OUR RECREATIONAL PRODUCTS ARE CONSTRUCTED USING CUSTOM SPECIFICATIONS. However, they are not engineered

for extreme weather, climates or environments. Modification, abuse, and inclement or "surprise" weather conditions may make additional precautions necessary. Here are some tips should you find yourself preparing for adverse conditions:

Make sure any guy lines/ropes on your structure are well-secured in the ground and lines/ropes are sufficiently "taught" between structure and stake; adjust where needed. Facing periods of heavy winds? Secure tent loops and guy lines/ropes with extra stakes if necessary.

Check the corners of the roof fabric and make sure roofline is properly positioned on framing. Use ALL provided methods of securing your fabric to its framing: nylon fastener strips, ties, and guy lines/ropes where located. Storms or steady rains may collect in water pockets on the roofline. Water adds weight, and weight weakens the overall structure. Avoid possible collapse by maintaining a watchful eye and removing any water accumulation that may occur.



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC. THIS FABRIC IS NOT FIREPROOF! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Do NOT ERECT NEAR an open flame. NEVER use any fuel burning, oxygen consuming devices, or any device that produces fumes – including, but not limited to: cooking stoves, lanterns, candles, hibachis, or heaters – in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.



Your product is NOT machine washable. Your product is NOT machine dryable.

CARE & STORAGE One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts – steel, plastic, and fiberglass – before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.

LIMITED 6 MONTHS WARRANTY

If your product does not work properly because of a defect in materials or workmanship, for 6 months from the date of purchase, at its option either (a) repair our product with new or refurbished parts, or (b) replace it with a new product. The decision to repair or replace will be made by us.

If repair is needed during the limited warranty period, the purchaser will be required to furnish a sales receipt as proof of purchase indicating date of purchased, amount paid, and place of purchase. Product will not be covered under warranty due to damages resulting from misuse, excessive or abusive usage, and/or inclement weather conditions (i.e. wind storms, hurricanes, lightning storms, tornadoes). Acts of God resulting in damage to tent and its components are not covered under this limited warranty. In such event, the consumer assumes cost of needed parts. We are not responsible for normal wear and tear, zipper exhaustion, or the natural breakdown in materials that occurs with extended use.