

CORE 6 Person Lighted Instant Cabin Tent
11ft x 9ft x 72in

Model #40532



Setup Tips

- For a comfortable night's rest, clear your camp area of debris before setting up your tent.
- When opening for the first time, the rainfly is rolled together with the tent body.
- Remove all protective cardboard and foam inserts around the side hubs before initial setup.
- Push the awning pole through the sleeve, don't pull.
- Make sure the sleeve fabric is evenly distributed to avoid catching the pole.


Instant Tent Core™ Instant Technology:

Pre-attached poles that telescope and click into place ensure a quick 60-second setup
NOTE: 2 people will be needed to erect and extend the tent poles

Need some help?


✉ help@coreequipment.com
➡ coreequipment.com

Contents & Repair Parts

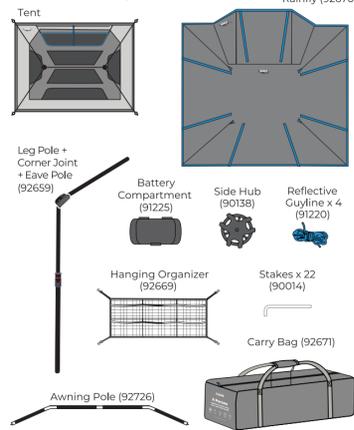

1 Prepare for Setup

- Unfold (4) leg poles at the joints.

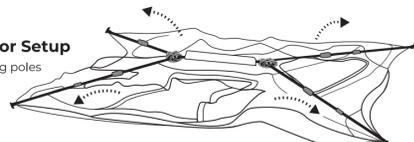


2 Lift Up Arm Joints

- Grab eave poles and pull straight out to create tent's cabin shape (leg poles will angle at joints to partially stand up).




3 Extend Leg Poles

 - NOTE:** DO NOT extend telescoping poles until all legs and ceiling hubs are elevated.
- Extend each of the (4) leg poles until blue locking buttons "click," and lock poles into place (fig. 1).
- You can now easily move your tent to its final position.



4 Attach Rainfly with Awning Pole

- Drape rainfly over tent, placing "CORE" to the front side of tent with door.
- Attach (1) hook-and-loop tab on the underside of the rainfly to each pole (fig. 2).

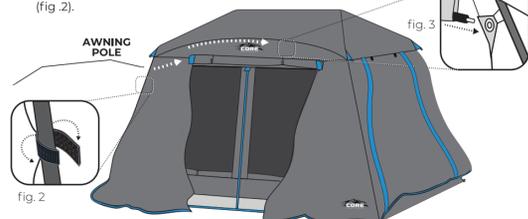

5 Setup Awning


- Push black awning pole through the sleeve on the inside front of rainfly.
- Arch black awning pole and insert the pins on each end into the grommets located at the top of each front corner of the tent (fig. 3).

6 Stake Tent, Secure Ground Vents and Guylines

- Drive stakes at a 45° angle through web loop at base of tent to secure to ground (fig. 4). Floor of tent should be taut when staked properly.
- Stake out each guyline and rainfly loop at a 45° angle.
- Tighten rainfly guylines as needed by adjusting the slider up the cord.



Lighting Component **NOTE:** Pressing the "NIGHT LIGHT" button activates amber-colored lights to help preserve night vision.

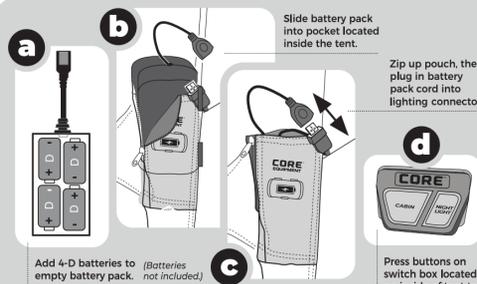

- Battery Warnings:**
- Always purchase the correct size and grade of battery most suitable for the intended use.
 - When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.
 - Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
 - Clean the battery contacts and also those of the device prior to battery installation.
 - Ensure the batteries are installed correctly with regard to polarity (+ and -).
 - Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
 - Remove used batteries promptly.


For recycling and disposal of batteries to protect the environment, please check the internet or your local phone directory for local recycling centers and / or follow local government regulations.

CAUTION: USB is not compatible with charging external device.
IMPORTANT: Remove battery pack before taking down tent. Failure to do so will drain the batteries and possibly damage the tent fabric.

Take Down Instructions:

1 Prepare for Takedown


- Before you start, leave the tent door unzipped to allow air to escape tent.
- Remove stakes from guylines. Store in stake bag.
- Remove hook and loop fasteners from poles on the underside of rainfly (fig. 1).

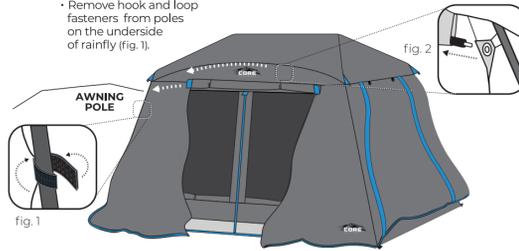

- Remove awning pole (fig. 2) from underneath rainfly by carefully pushing pole. Feed it through the sleeve slowly, watching to be sure it doesn't get caught on anything. Fold and store in pole bag.

2 Takedown

- Detach rainfly and fold into thirds lengthwise and set aside to roll up along with tent body.
- Unlock the (4) leg poles. Start by pushing the locking button (fig. 3) to release the telescoping poles. Push down on the side hubs to collapse (fig. 4). Have patience and do not use a lot of pressure, as that can damage poles.
- Fold all of the collapsed poles to the center of the tent (fig. 5).

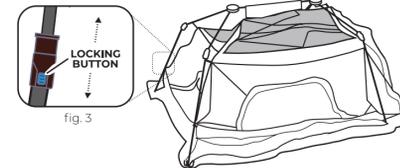

3 Packing the Tent

- Place tent on top of folded rainfly, then roll the rainfly along with the tent pod. The weight of the tent will help remove any air from the rainfly. Use ties to bundle the tent and ensure compression. Store rolled tent in carry bag.

Frequently Asked Questions:

- Are replacement parts available?** Yes, just contact Customer Service at help@coreequipment.com for replacement parts. Most parts can be replaced.
- The center of the tent won't stand up.** You may have a broken corner joint. Check all of the joints (under the fabric sleeves) and call Customer Service if you need a replacement.
- The poles are not staying extended.** Check that all four locking buttons are popped out. Extend pole farther if button is not locked. It will "click" into place.
- How do I get everything back in the bag?** The trick is to take your time and remove all the air. Use the weight of the poles to roll the tent on the ground and force air out.
- How to clean the tent?** Clean the tent with a soft sponge, mild soap and tepid water. Be sure to scrub gently and remove all soap. Let it dry in sunlight, which also naturally cleans the tent.
- What is the wall plug symbol?** That is a port for an electrical cord to access your tent. The electrical cord can be used on a campsite with power or with a generator outside your tent. It closes fully when not in use.
- Can the tent be used in the rain?** Absolutely. The tent and rainfly have a water-resistant treatment, and the seams have been sealed with water-resistant tape at the factory.
- How many seasons is this tent?** This is a 2-3 season tent, not recommended for use in severe weather conditions.
- What are the dimensions of the tent?** The tent is 11' x 9' x 72" (3.35m x 2.74m x 1.82m).

Warnings and Cautions:

⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

DO NOT use fuel burning devices inside or near tent materials.

DO NOT permit children to light matches, operate burning appliances or handle any flame sources in or near the tent.

- Do not smoke, use matches, candles or open flames of any kind in or near the tent.
- Do not refuel lanterns, stoves or heaters inside tent.
- Do not cook inside tent.
- Do not store flammable liquids inside tent.

⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- For best results in windy conditions, position narrow end of tent into the wind.
- Secure with all stakes and guylines provided to prevent property damage or personal injury.
- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation throughout the tent. Never store the tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt.
- Do not pack stakes inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.**
- Do not leave your tent setup for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.



DO NOT SPRAY!

IMPORTANT:

THE ORIGINAL FIRE RETARDANT AND WATER-REPELLENT PROTECTIVE COATINGS MAY BE COMPROMISED IF SPRAYS OR OTHER CHEMICAL TREATMENTS ARE USED ON THE TENT. FABRIC HAS BEEN FACTORY TREATED. IT IS HIGHLY WATER-REPELLENT; HOWEVER, IT IS NOT WATERPROOF. ALL TENTS CAN EXPERIENCE SEAM LEAKAGE DURING WET WEATHER. IF YOU WANT ADDITIONAL MOISTURE PROTECTION, TRY A SEAM SEALING COMPOUND ONLY; STRICTLY FOLLOW THE MANUFACTURER'S DIRECTIONS. IT IS RECOMMENDED THAT YOU SEAL THE TENT DURING THE INITIAL SETUP AS WELL AS PRIOR TO EACH CAMPING SEASON. SEAM SEALER COMPOUNDS CAN BE PURCHASED AT YOUR LOCAL CAMPING PRODUCTS OUTLET. FOR MISSING PARTS EMAIL HELP@COREEQUIPMENT.COM.

PLEASE DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE.



Elevate LLC
Overland Park, KS 66223

Made in Bangladesh · Printed in Bangladesh

Revised 11/07/25