


CORE 12 Person Instant Cabin Tent with Full Rainfly

18ft x 10ft x 80in

Model #40488

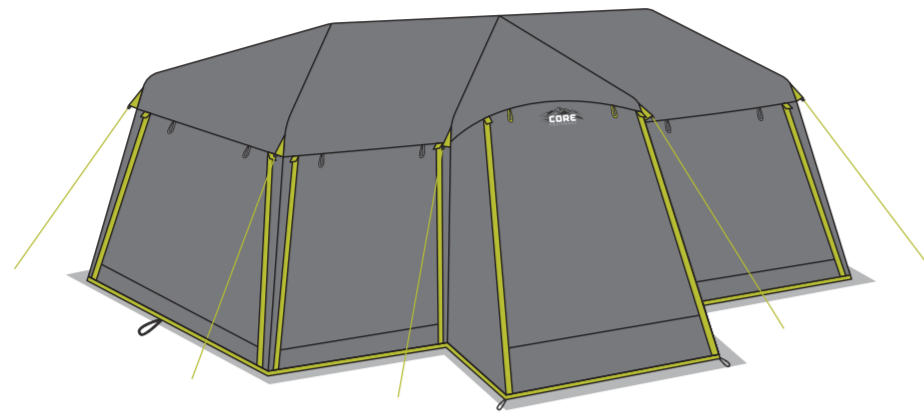

- 2 People
- Rubber Mallet
- Level Area

Setup Tips

- For a comfortable night's rest, clear your camp area of debris before setting up your tent.
- When opening for the first time, the rainfly is rolled together with the tent body.
- Remove all protective cardboard and foam inserts around the side hubs before initial setup.
- Push the awning pole through the sleeve, don't pull.
- Make sure the sleeve fabric is evenly distributed to avoid catching the pole.

Instant Tent CORE Instant Technology:


Pre-attached poles that telescope and click into place ensure a quick 2 minute setup

NOTE: 2 people will be needed to erect and extend the tent poles

Need some help?


- help@coreequipment.com
- coreequipment.com
- 1-888-775-5628

Contents & Repair Parts

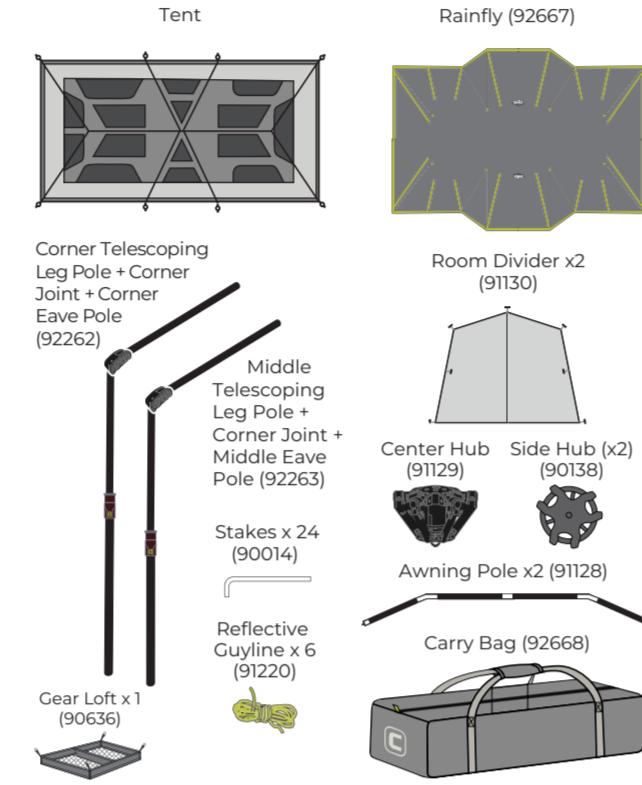



1 Prepare for Setup

- Unfold (8) leg poles at the joints. Center will stand up.

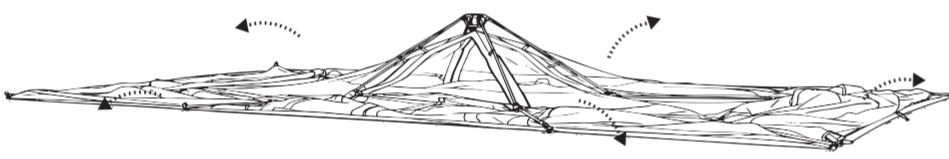

2 Lift Up Arm Joints

- Grab eave poles and pull straight out to create tent's cabin shape (leg poles will angle at joints to partially stand up).

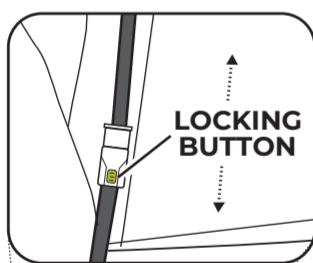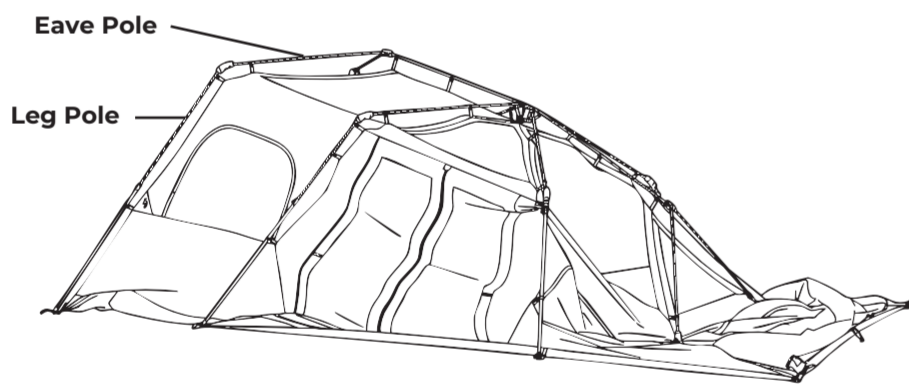

3 Extend Leg Poles

- NOTE:** DO NOT extend telescoping poles until all legs and ceiling hubs are elevated.
- Extend each of the (8) leg poles until the green locking buttons "click" and lock the poles into place (fig. 1).
- You can now easily move your tent to its final position before installing the rainfly and securing with stakes and guylines.



4 Attach Rainfly with Awning Pole

- Drape rainfly over tent, aligning "CORE" logos with the front and rear doors.
- Push each black awning pole through the sleeves on the inside front of the rainfly, one for each door.
- Arch each black awning pole and secure it by inserting the pins at each end into the grommets above the top corners of the doors (fig. 3).
- Attach (1) hook-and-loop tab on the underside of the rainfly to each pole (fig. 4).



5 Stake Tent, Secure Ground Vents and Guylines

- Drive stakes at a 45° angle through web loop at base of tent to secure to ground (fig. 5). Floor of tent should be taut when staked properly.
- Stake out each guyline and rainfly loop at a 45° angle (fig. 6).
- Tighten rainfly guylines as needed by adjusting the slider up the cord.



Take Down Instructions:

- Leave door unzipped during take down to allow air to escape tent.
- Remove stakes from guylines. Store in stake bag.
- Remove hook and loop fasteners on the underside of rainfly from poles.
- Remove awning pole from underneath rainfly and push pole through sleeve. Fold and store in pole bag.
- Detach rainfly and fold into thirds lengthwise and set aside to roll up along with tent body.
- Unlock the (8) telescoping leg poles and push down on the side hubs to collapse.
- Fold all of the collapsed poles to the center of the tent.
- Gather folded tent poles and fabric into the center to form a pod.
- Place tent on top of folded rainfly, then roll the rainfly along with the tent pod. The weight of the tent will help remove any air from the rainfly. Use ties to bundle the tent and ensure compression. Store rolled tent in carry bag.

Frequently Asked Questions:

- Are replacement parts available?** Yes, just contact Customer Service at 1-888-775-5628 for replacement parts. All parts can be replaced.
- The center of the tent won't stand up.** You may have a broken corner joint. Check all four of the joints (under the fabric sleeves) and call Customer Service if you need a replacement.
- The poles are not staying extended.** Check that all six locking buttons are popped out. Extend pole farther if button is not locked. It will "click" into place.
- How do I get everything back in the bag?** The trick is to take your time and remove all the air. Use the weight of the poles to roll the tent on the ground and force air out.
- How to clean the tent?** Clean the tent with a soft sponge, mild soap and tepid water. Be sure to scrub gently and remove all soap. Let it dry in sunlight, which also naturally cleans the tent.
- What is the wall plug symbol?** That is a port for an electrical cord to access your tent. The electrical cord can be used on a campsite with power or with a generator outside your tent. It closes fully when not in use.
- Can the tent be used in the rain?** Absolutely. The tent and rainfly have a water-resistant treatment, and the seams have been sealed with water-resistant tape at the factory.
- How many seasons is this tent?** This is a 2-3 season tent, not recommended for use in severe weather conditions.
- What are the dimensions of the tent?** The tent is 18' x 10' x 80" (5.48m x 3.04m x 2.03m).

1-Year Limited Warranty:

CORE Equipment and Elevate LLC warrants for a period of one year commencing no earlier than the date of delivery, this product against any defects in materials or workmanship. At its discretion, CORE Equipment may provide replacement parts to original purchaser. Original receipt or proof of purchase as well as proof of defect in the form of a photograph or video is required. CORE Equipment will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser for a period of one year commencing no earlier than the date of delivery and is not transferable.

This warranty does not cover any product purchased through unauthorized dealers/distributors and/or unauthorized resellers on online auction websites. CORE uses approved and authorized distributors to furnish quality products, and CORE provides warranty coverage only on products purchased from those distributors. If the product was purchased from an unauthorized reseller, this warranty does not apply. Unauthorized resellers may sell products that are used, defective, counterfeit, or which may not be designed for use in that specific country. To determine whether the seller of a CORE Equipment product is one that has been approved and authorized by Elevate LLC owner of the CORE Equipment brand, please contact help@coreequipment.com or call customer service at 1-888-775-5628.

This 1-Year Limited Warranty does NOT cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will CORE Equipment or Elevate LLC be liable or responsible for any incidental or consequential damages. This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1-Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Warnings and Cautions:

- WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC**
This tent is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.
- DO NOT** use fuel burning devices inside or near tent materials.
- DO NOT** permit children to light matches, operate burning appliances or handle any flame sources in or near the tent.
- Do not smoke, use matches, candles or open flames of any kind in or near the tent.
- Do not refuel lanterns, stoves or heaters inside tent.
- Do not cook inside tent.
- Do not store flammable liquids inside tent.

WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- For best results in windy conditions, position narrow end of tent into the wind.
- Secure with all stakes and guylines provided to prevent property damage or personal injury.
- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation throughout the tent. Never store the tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt.
- Do not pack stakes inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.
- Do not leave your tent setup for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.



DO NOT SPRAY!

IMPORTANT: THE ORIGINAL FIRE RETARDANT AND WATER-REPELLENT PROTECTIVE COATINGS MAY BE COMPROMISED IF SPRAYS OR OTHER CHEMICAL TREATMENTS ARE USED ON THE TENT. FABRIC HAS BEEN FACTORY TREATED. IT IS HIGHLY WATER-REPELLENT; HOWEVER, IT IS NOT WATERPROOF. ALL TENTS CAN EXPERIENCE SEAM LEAKAGE DURING WET WEATHER. IF YOU WANT ADDITIONAL MOISTURE PROTECTION, TRY A SEAM SEALING COMPOUND ONLY; STRICTLY FOLLOW THE MANUFACTURER'S DIRECTIONS. IT IS RECOMMENDED THAT YOU SEAL THE TENT DURING THE INITIAL SETUP AS WELL AS PRIOR TO EACH CAMPING SEASON. SEAM SEALER COMPOUNDS CAN BE PURCHASED AT YOUR LOCAL CAMPING PRODUCTS OUTLET. FOR MISSING PARTS EMAIL HELP@COREEQUIPMENT.COM.

PRIOR TO RETURNING TO STORE, PLEASE CONTACT CUSTOMER SERVICE TO RESOLVE THE ISSUE.



Elevate LLC
Overland Park, KS 66223

Made in Bangladesh · Printed in Bangladesh

Revised 10/29/25



STITCH LINE