


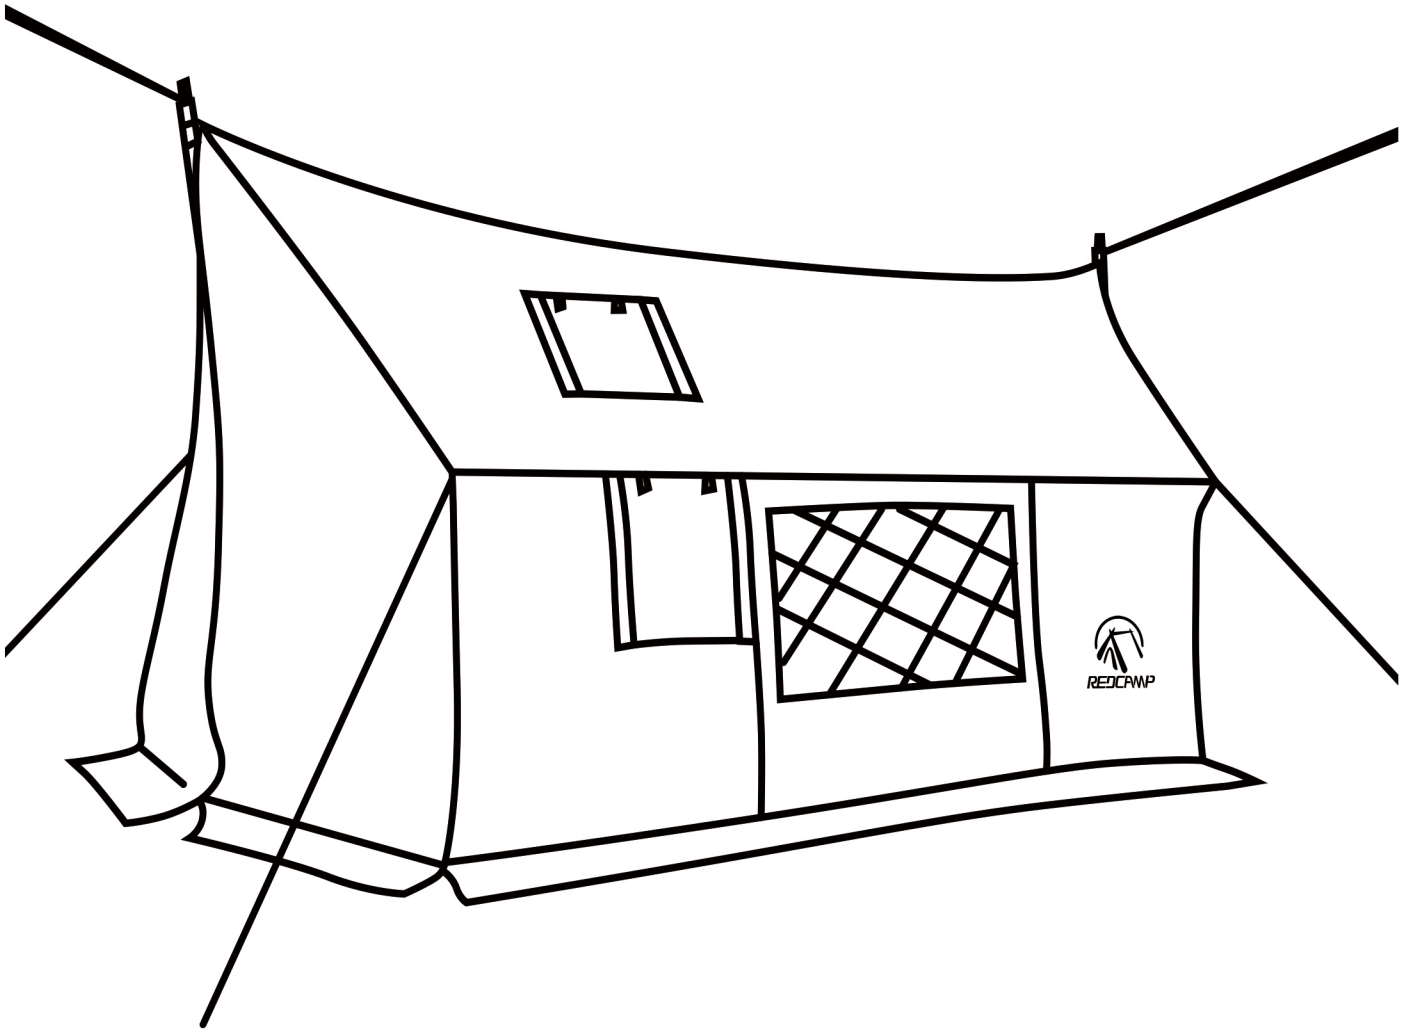

HOT TENT/4 SEASON TENT

INSTALLATION INSTRUCTIONS

HOT TENT/4 SEASON TENT

6.6FT X 9.8FT X 6.2FT

1		2		3		4		5	
	Tent Body x 1		Carry Bag x 1		Fitting Pouch x 1		Wind Rope x 6		Tent Stake x 12



ASSEMBLY INSTRUCTION

This hot tent can be effortlessly set up by a single person. This tent lacks a bottom.

Thus, if a tent bottom is required during usage, a ground sheet should be separately prepared (please note that if it is employed with a tent stove, fire prevention measures must be taken when using the bottom material).

STEP 1

First, locate two trees or awning poles at an appropriate distance. Attach the retractable buckles at both ends of the top with guy ropes and fasten them to the trees or awning poles.

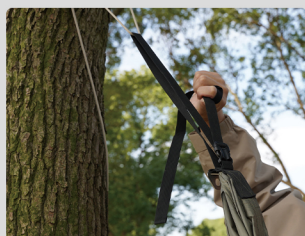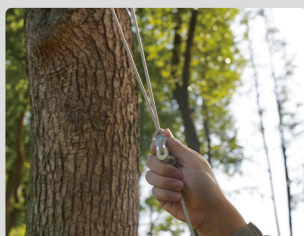

STEP 2

Unfold the bottom of the tent and secure the four corners respectively with tent pegs.



STEP 3

Attach guy ropes to the four suspension points at the waist. Once tightened, secure them with tent pegs (it can also be fixed with trekking poles or tree branches for enhanced stability).



STEP 4

Employ Velcro to fix the heat-insulating cloth windows (there are two windows, one on the top and one on the side, which can be flexibly installed).



TIPS FOR USING THE HOT TENT



Employ a hot tent in conjunction with a tent stove. (Be attentive to fire prevention measures. Maintain an appropriate distance between the tent stove and the tent fabric. Direct contact of sparks with the tent will result in small holes in the tent.)



It can be flawlessly utilized in combination with a hammock. Both sides adopt a 3-zipper design.



Ideal for all four seasons. Double-layer mosquito nets are added on both sides, and there are windows on both sides as well, which can ensure good ventilation even in summer and effectively prevent mosquitoes.

DISASSEMBLY INSTRUCTIONS

* Store all poles and stakes in their corresponding bags to prevent possible tearing or damage to fabric.

* Make sure that all door zippers are not fully closed, leaving room for air to escape during repacking.

1. First, remove the fixed guy ropes at the bottom and waist.
2. Then, remove the retractable buckles on both sides of the top.
3. Fold the tent in half according to the size of the storage bag. Store the tent pegs and guy ropes in a separate storage bag and put them all into the main bag together.